
17-5. FULL ASCII TABLE



SOH



HT



STX



LF



ETX



VT



EOT



FF



ENQ



CR



ACK



SO



BEL



SI



BS



DLE

	
DC1	SUB
	
DC2	ESC
	
DC3	FS
	
DC4	GS
	
NAK	RS
	
SYN	US
	
ETB	SPACE
	
CAN	!
	
EM	"



#



+



\$



,



%



 
-



&



.



'



/



(



0



)



1



*



2



3



4



5



6



7



8



9



:



;



<



=



>



?



@



A



B



C



D



E



F



G



H



I



J



K



L



M



N



O



P



Q



R



S



T



U



V



W



X



Y



Z



[



\



]



^



_



`



a



b



c



d



e



f



g



h



i



j



k



l



m



n



o



p



q



r



s



t



u



v



w



x



y



z



{



|



}



~



F1(@A)



F2(@B)



F3(@C)



F4(@D)



F5(@E)



F6(@F)



F7(@G)



F8(@H)



F9(@I)



F10(@J)



F11(@K)



F12(@L)



HOME(&A)



END(&B)



Cursor Right(&C)



Cursor Left(&D)



Cursor Up(&E)



Cursor Down(&F)



PgUp(&G)



PgDn(&H)



TAB(&I)



Back TAB(&J)



ESC(&K)



ENTER(&L)



Insert(&M)



Delet(&N)



Return(&O)



CTRL ON(&P)



CTRL OFF(&Q)



ALT ON(&R)



ALT OFF(&S)



SHIFT ON(&T)



SHIFT OFF(&U)



WIN (&V)



HOME (&W)



END (&X)