

Factory Default barkodunu okutun

Product Introduction

This is the simple user's manual, for detailed manual, please download from our website or contact the supplier. (With * is the Default Setting)



Factory Default

If scanner cannot be used normally due to an error setting, try to scan the "Factory Default" code above.

Buzzer Description

Voice Type	Details Description
One medium long high voice	Successful scanning or pairing
Three continuous short voice	Alarm prompt

Wireless Transmission Mode dan 2.4G barkodunu okutun

Wireless Transmission Mode



*2.4G



Bluetooth




Bluetooth BLE



Bluetooth SPP

Wireless Transmission Mode dan 2.4G barkodunu okuttuktan sonra Okuyucunun üzerinde bulunan 2.4G

Indicator Description

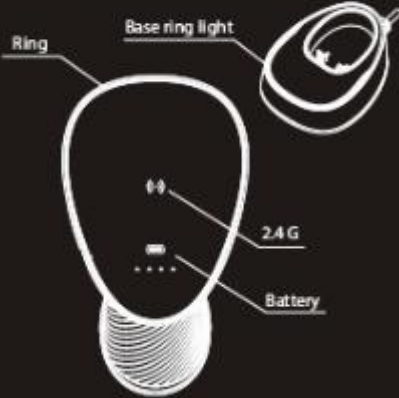

Alicının altında bulunan eşleşme barkodu okuttuğunuzda işlemi tamamlanmış olacaktır

Receiver Pairing



Scan the "Receiver Pairing Code " on the base

Factory Default: barcode scanner paired with base