


# Adjustable Core Label Rewinder

## R-412 User's Guide

Part No: 00-00R4C-030  
Revision Date: Jan. 2019

1

### ■ Installation of paper guide module

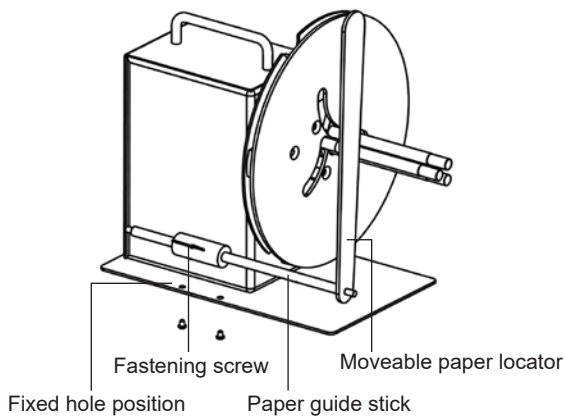


- Hold the paper guide stick against the base plate
- Loosen the fastening screw to adjust the width
- Move the moveable paper locator to adjustable spindle while rewinding

3

Thank you for purchasing adjustable core rewinder!  
As the company's products is in improving, the product you purchased may be slightly different from the instructions in the manual.


### Installation Notes

#### ■ Parts

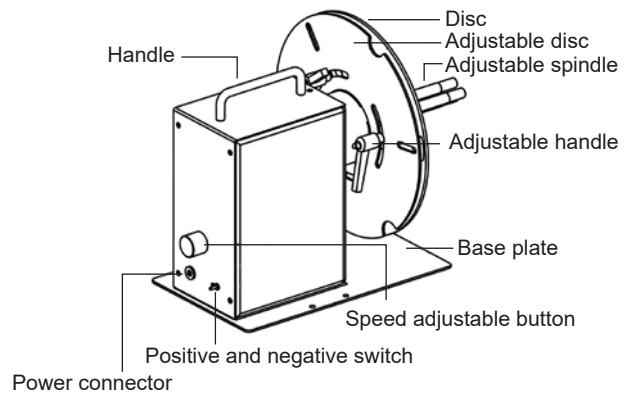


2

#### ■ Adjustable handle adjustment

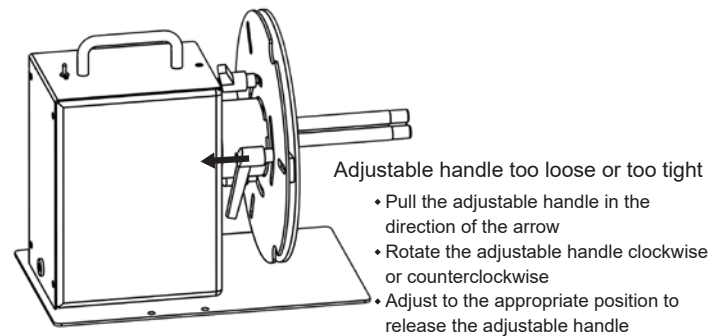


#### ■ Core size adjustment and paper core installation or unloading

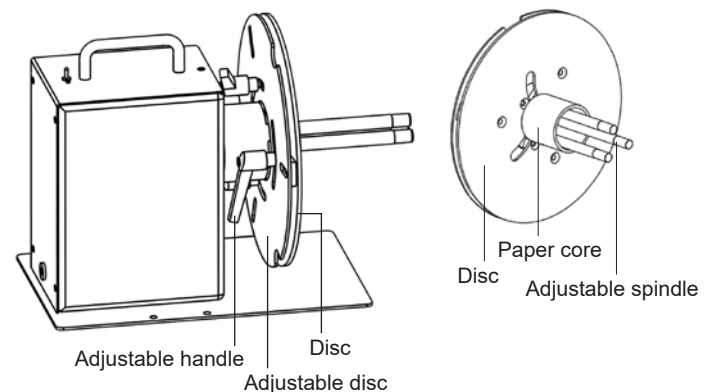

- Pull the paper core into the adjustable spindle and close to the disc
- Rotate 3 adjustable handles counterclockwise to fully release
- Grasp the disc
- Rotate the adjustable disk
- Hold the paper core completely and lock the adjustable handle
- Remove one or more adjustable handles to remove the paper core

4


## ■ No paper core operations

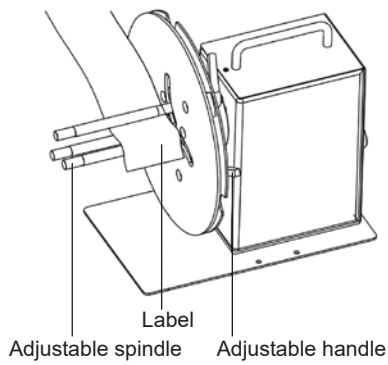

- Loading :**
- Adjust the adjustable spindle to the size you need
  - Place the label into the three spindle axes and close to the disc
  - Turn on the rewinder

- Unloading :**
- Release one or more adjustable handles
  - Remove the label

## ■ Label rewinding

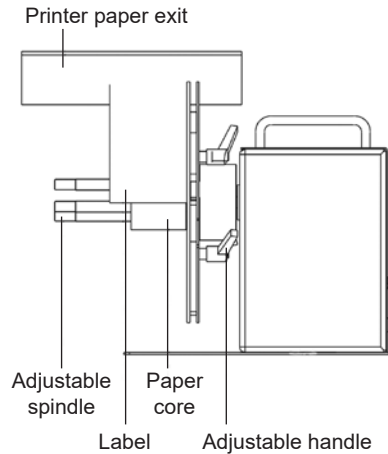

- Loading :**
- Put the paper core into the three-axis and close to the disc
  - Hold up the paper core and lock the 3 adjustable handle
  - Paste the label on the paper core to start rewinding

- Unloading :**
- Release one or more adjustable handles
  - Remove the paper core

5

## ■ Notice

- Do not plug the power cord by wet hands to avoid the risk of electric shock.
- When the products is idling, do not put fingers, sharp objects, etc. into the rewinding module
- Avoid the production in this environment to use, such as alkali oil, pesticides, other water near the object an high humidity environment. Do not put the product in a sloping environment, to avoid tipping over.
- When the machine is finishing the rewinding work, turn off the power and unplug the power plug, in order to avoid circuit failure occurs.

## ■ Maintenance

- Please turn off the power before cleaning the product.
- Do not flush the body directly by water.
- Do not use any abrasive tools and solvents to clean which will damage the surface, please clean the products by detergent and wipe it by a dry cloth.
- Do not open the product to inspection and clean.

7

## ■ Product parameters

Product		R-412
Speed	Inches/Sec	12
Disk diameter	Millimeter	220
Core range	Inches	1~4
Label width	Millimeter	120
Rewinding method	Automatic synchronization	Pulling force Positive and negative
Power Specifications	Power Adapter	100~240V AC
Package size (MM)	L	415
	W	325
	H	320
Product weight	Kg	5.5
Working environment	No condensation	-20~80°C

Note: 1 inches=25.4 millimeter

## ■ Package content

- Rewinder 1
- Power cord 1
- Paper guide module 1
- QIG 1

6

### Note

\*Specifications, accessories, parts and programs are subject to change without notice.

## Argox Information Co., Ltd.

7F., No. 126, Ln.235, Baoqiao Rd., Xindian Dist., New Taipei City 231, Taiwan (R.O.C.)  
Tel: +886-2-8912-1121 Fax: +886-2-8912-1124

<https://www.argo.com>  
<https://www.youtube.com/user/argoxmkt>  
email:service@argox.com

Copyright © 2019. Argox Information Co., Ltd. All Rights Reserved.