

Software Manual Easy Setup Utility iOS

Rev. 1.00

http://www.bixolon.com

Introduction

This manual explains the utilities that can be utilized in iOS environments for BIXOLON printer products. It is advisable to read the contents of this manual carefully before using the customer display for the first time.

We at BIXOLON maintain ongoing efforts to enhance and upgrade the functions and quality of all our products. In following, product specifications and/or user manual content may be changed without prior notice.

Table of Contents

1. Operating System (OS) Environment	4
2. Support Printer	4
3. Software Installation Preparation	4
4. Method of Use	5
4-1 Icon Screen	5
4-2 Execution Screen	6
4-3 Connect Screen	8
4-3-1 Smart Connection Explanation	9
4-3-2 Wi-Fi Explanation	12
4-3-3 Ethernet Explanation	13
4-3-4 Bluetooth Explanation	14
4-3-5 Bluetooth LE Explanation	16
4-3-6 Main screen connected to printer	17
4-4 Print Screen	18
4-4-1 Receipt Explanation	19
4-4-2 Text Print Explanation	20
4-4-3 Photo Explanation	21
4-4-4 Camera Explanation	22
4-5 VMSM Screen	23
4-6 NV Image Screen	24
4-6-1 NV Image List Explanation	25
4-6-2 NV Image Download Explanation	25
4-6-3 NV Image Delete Explanation	25
4-6-4 NV Image Print Explanation	25

1. Operating System (OS) Environment

The following operating systems are supported for usage.

iOS 8.0 and later.

2. Support Printer

The iOS Easy Setup Utility can be used for the following printer models.

All models of POS Printer All models of Mobile Printer (Except Label Type)

* Label printer and B-Gate products are not supported.

3. Software Installation Preparation

The latest version of the iOS Easy Setup Utility is available for download from the App Store.

4. Method of Use

4-1 Icon Screen

When iOS Easy Setup Utility is downloaded through the App Store, the following icons are created.



4-2 Execution Screen

When iOS Easy Setup Utility is executed, the following screen is displayed.



 Connect button Click to connect to the printer.

2) Print button Click to print in a variety of ways.



>

>

4) NV Image button

Click to print and control the images saved in the connected printer.



5) Manual button

Click to see how to use the iOS Easy Setup Utility.



Caution If the printer is not connected, Print, VMSM, and NV Image buttons are disabled.

4-3 Connect Screen

When you click Connect button on the main screen, the following screen is displayed.



4-3-1 Smart Connection Explanation

In order to connect the host device (iPhone / iPad) and the printer with Wi-Fi, both devices must be set to the same network environment. You can set the printer's network directly using the Net Configuration Tool.

1. Smart Connection?

Smart Connection is a software function that allows the user to easily set a printer's network by automatically configuring it to the network status in which it can be connected to the host device.

2. Support Printer

This function is available only for the printer models that support Smart Connection. Please check the specification sheet for detailed information about support. Ex) SPP-R220, SPP-R200IIIPlus, SPP-R310plus, SPP-R410 ...

- 3. Setup method
 - 1) Set the printer to Smart Connection mode.
 - * How to switch the printer to Smart Connection mode Press and hold down the Feed button and Power button at the same time for more than 1 second after opening the cover of the mobile printer, and the printer prints the message "Simple Connection mode!", upon being switched to Smart Connection mode.



2) Connect to Wi-Fi in the setting menu of the iPhone / iPad.



3) Click the Smart Connection button in iOS Easy Setup Utility.

Smart Connection

4) Enter the SSID and Password of the AP connected to iPhone / Pad and click OK.

No SIM 🗢	9:	07 AM	∦ 100% [_ +
< Easy	Setup Utility C	Connect		
	Smart C	Connection		
	Smart C	Connection		>
0.	ASUS_SW_2G			×.
0-0 E	•••••			2
₿ E	OK	Cance		>
Blu	letooth LE			>

iOS Easy Setup Utility

5) When the device finds the nearest printer in Smart Connection mode after searching, the printer is automatically set up to the same network environment as the AP specified by Smart Connection and becomes ready for Wi-Fi connection.

No SIM 🗢 9:07 AM		🕴 100% 💼 /
< Easy Setup	Utility Connect	
	Smart Connection	
INTERFACE SEL	ECT	
🔊 Wi-Fi		>
🔒 Etherne	Printer Searching	>
Bluetoo		>

When the printer is successfully set up via Smart Connection, the printer prints the network information.



4-3-2 Wi-Fi Explanation

1) Search for printers that can be connected via the Wi-Fi interface and display a list of printers that can be connected.



- * The printer list shows the IP and connection status of the printer.
- 2) Click the searched printer and it will be connected to it.

No SIM 🗢	9:12 AM 🕴 100% 🗖		
Connect	Wi-Fi		
SPP-R220 I/F : Wi-Fi Address : 192.168	3.1.138		
	Test Print Out		
SEARCHED PRINT	ER LIST		
192.168.1.138		Connected (i)	
	Disconnect		

* The connection status information is changed to Connected.

4-3-3 Ethernet Explanation

1) Search for printers that can be connected via the Ethernet interface and display a list of printers that can be connected.



- * The printer list shows the IP and connection status of the printer.
- 2) Click the searched printer and it will be connected to it.

No SIM 🗢	9:56 AM	🕴 100% 🛑 /	
Connect	Ethernet		
SRP-QL302 I/F : Ethernet Address : 192.168	.1.212		
	Test Print Out		
SEARCHED PRINTE	R LIST		
192.168.1.212		Connected (i)	
	Disconnect		

* The connection status information is changed to Connected.

4-3-4 Bluetooth Explanation

1) Pair with a Bluetooth printer in order to establish a connection.

No SIM 🗢	10:38 AM	՝ 🗱 100% 🛑 ≁
Settings	Bluetooth	
Bluetooth		
Now discoverable	as "bixolon's iPhone	и,
MY DEVICES		
SPP-R310	(Connected (i)

2) Searches for printers that can be connected via the Bluetooth interface, and displays a list of available printers.

No SIM 🗢	9:56 AM	🖇 100% 🛑 /
Connect	Bluetooth	
SEARCHED PRIN	TER LIST	
SPP-R310	not (Connected (i)

* The printer list shows the printer name and connection status.

3) Click the searched printer and it will be connected to it.



* The connection status information is changed to Connected.

4-3-5 Bluetooth LE Explanation

1) Search for printers that can be connected via the Bluetooth LE interface and display a list of printers that can be connected.

No SIM 穼	9:57 AM	🕴 100% 🛑 /
Connect	Bluetooth LE	
SEARCHED PRIN	ITER LIST	
(null)	not C	onnected (i)
SPP-R410so	ftwar not C	onnected (i)

- * The printer list shows the IP and connection status of the printer.
- 2) Click the searched printer and it will be connected to it.

No SIM 🗢	9:57 AM	🕴 100% 🛑 /
Connect	Bluetooth LE	
SPP-R410softwa I/F : Bluetooth LE Address : 74:f0:7	r ˈd:b0:20:84	
	Test Print Out	
SEARCHED PRINT	ER LIST	
(null)	not	Connected (i)
SPP-R410soft	war	Connected (i)
	Disconnect	

* The connection status information is changed to Connected.

4-3-6 Main screen connected to printer

When connected, the Connect button changes to Disconnect button.

No SIM ᅙ	10:50 AM	第 100% →
	Easy Setup Utility	1
SPP-R310 I/F : Bluetooth S/N : 000000	00000000	
	Disconnect	
🔲 Print		>
VMSM		>
🖂 NV Imag	ge	>
🚺 Manual		>
COF	PYRIGHT© 2017 BY BIXO COMMISSION. ALL RIC	LON COPYRIGHT GHTS RESERVED. ver : 1.0 date : 20170921

4-4 Print Screen

When you click Print button on the main screen, the following screen is displayed.



4-4-1 Receipt Explanation

Prints a sample image of a receipt.

No SIM ᅙ	4:57 PM	∦ 100% — •≁
Print	Receipt	
PRINT RECEIPT	-	
BI	PanKyo, Korea	DN®
E> Vis tell	xplore BIXOL sit www.Bixolon.com us about your expe	ON n and rience
1 LADIES	PERFUM	134.00
SUB TOTA TOTAL TA TOTAL	AL X -	134.00 .00 134.00
	www.Bixolon.com	n
	PRINT	

4-4-2 Text Print Explanation

Prints the text string entered in View.



4-4-3 Photo Explanation

Selects an image of the photos saved in the iPhone/iPad and prints it.



PRINT

4-4-4 Camera Explanation

Runs the camera to print the captured images.



4-5 VMSM Screen

1. VMSM?

VMSM is a software function that enables one to check the current set values of the printer and change them according to the user's convenience.

Ex) Print speed, print density, font, etc.

2. When you click VMSM button on the main screen, the following screen is displayed.

No SIM	5:00 PM	100% 페 ·	No SIM 5:00	PM ∦ 100% ■ •
K Easy Setup L	Jtility VMSM		Easy Setup Utility VN	ISM
SPP-R310 I/F : Bluetooth S/N : 00000000	000000		Font	Font A 12X24 >
Print Speed		100mm/s >	Power Off Time	0 Min
Print Density		100% >	Power Save Time	10 Sec
Double Byte (Sharactor Mode		MSR Configuration	Auto Track 1/2/3 >
			Low Battery Buzzer	
Code Page		PC852 >		
Font	Fo	ont A 12X24 >	Paper out Bell	
			Baudrate	57600 >
Power Off Tim	ne	0 Min	Parity	Odd >
Power Save Ti	ime	10 Sec		
MSR Configur	ation Auto	Track 1/2/3 >		
Low Battery B	uzzer			
Paper out Bell			Sa	ve
Baudrate		57600 >		

4-6 NV Image Screen

1. NV Image?

NV Image is an image saved to the flash memory of the printer.

2. When you click NV Image button on the main screen, the following screen is displayed.



4-6-1 NV Image List Explanation

Shows NV Image list saved in the current printer.



* If there is no saved image, nothing appears on the list.

4-6-2 NV Image Download Explanation

Saves the image obtained using Photo and Camera to NV Image.

Download

4-6-3 NV Image Delete Explanation

Deletes the saved NV Image.

Delete

* Deletes selected images, or all images.

4-6-4 NV Image Print Explanation

Prints the NV Image.

PRINT

Select the image you want to print from the saved NV Image List and click the Print button

Copyright Owned by BIXOLON

This User Manual and product are protected under copyright law. It is strictly prohibited to copy, duplicate, translate or convert into electronic form the whole or any part of the manual and product without the prior written approval of BIXOLON.

BIXOLON maintains ongoing efforts to enhance and upgrade the functions and quality of all our products. In the following, product specifications and/or user manual content may be changed without prior notice.

The BIXOLON logo is the registered trademark of BIXOLON.

Warning - U.S.A

This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Notice - Canada

This Apparatus complies with class "A" limits for radio interference as specified in the Canadian department of communications radio interference regulations. Get appareil est conforme aux normes class "A" d'interference radio tel que specifier par ministre canadien des communications dans les reglements d'interference radio.

Caution

Some semiconductor devices are easily damaged by static electricity. You should turn the printer "OFF", before you connect or remove the cables on the rear side, in order to guard the printer against the static electricity. If the printer is damaged by the static electricity, you should turn the printer "OFF".

Copyright © BIXOLON Co., Ltd. 2017. All rights reserved.

Revision history

Rev.	Date	Page	Description
1.00	30.10.17	-	New