Printer Installation Guide

KN09-00075A (Ver.1.1)

Information

This installation guide contains quick information required for the product installation. Refer to the User's Manual in the website that comes with the product for detailed installation instructions. The website contains the following information

- 1. Manual: User's, Bluetooth & Wi-Fi Connection, SLCS Programming, Code Pages, Software
- 2. Driver: Windows, OPOS, Linux & Mac CUPS
- 3. SDK: Android, Linux, Windows, iOS
- 4. Utility: Net Configuration Tool, Unified Label Utility-II
- 5. Label Design: Label Artist-II

We at BIXOLON Co., Ltd. maintain ongoing efforts to enhance and upgrade the functions and quality of all our products. The following, product specifications and/or user manual content may be changed without prior notice.

Please refer to the BIXOLON website for the addresses and phone numbers of the company's headquarters and branch offices.

Content Confirmation









Guide Disks m (0.47 inch

Product Part Names

Relt Stran





Installation and Charging






- 1) Insert the battery to the bottom of the printer, and ensure that you align the battery hook correctly.
- 2) Push the battery into the slot until you hear it snap in place.

Media

Installation

The battery is sold uncharged.



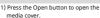

- 2) Fully open the media cover and insert the media as shown. (Remove the empty media core)
- 3) Check the orientation of the media when inserting it into the printer.
- 4) Pull out the media as shown and close the media cover.



- 1) Turn off the printer power.
- 2) Connect the power cord ② to the AC/DC adapter ① and then connect AC power
- 3) Open the external interface cap in the direction of 3).
- 4) Connect the AC/DC adapter to the power port.


Battery

Charging

 The printer may incur serious damage if the AC/DC adapter provided by BIXOLON is not used. BIXOLON is not legally liable for any such damages.

. The voltage and electrical current specifications of the printer and battery charges must match.)

Mobile Printer XM7-30

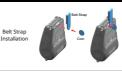

- 1) Insert the belt strap screw into the belt strap hole
- 2) Use a coin to tighten the belt strap screw. As shown in the image.

Control Panel Usage







Menu Move Button



Power Button

This button is used to turn the printer on, off, to move to main menu or to operate the

- 1) When the printer is off, press this button for approximately 2 seconds to turn on
- the powe 2) When the printer is on, press this button for approximately 2 seconds to turn off the power
- 3) Pressing this button while the LCD menu is being operated moves to the main menu or to operate the selected action from the menu.

Media Feed Button

- This button is used to feed the media manually or return to the previous step.
- 1) Press and hold this button while the printer is booting to print a self-test page.
- 2) Press this button in the standby mode to feed the media.
- Press this button to return to the previous menu.

Menu Move Button

This button is used to move the LCD menu.

Press this button to move the LCD menu from the top left to the bottom right.

Menu Select Button

This button is used to select the LCD menu.

Press this button to select the LCD menu or save the selected settings to the printer.

This function is independent of such other devices and software.

Run the self-test to check the setting information when you are setting up the printer for the

If no issue is found with the printer after running the self-test, examine the other devices running on the system or peripherals and software.

Self-Test Instructions

- 1) Turn the printer power on and go to Tools > Print Printer Config menu on the LCD 2) Press the power button (Print) to run the self-test.
- 3) The printer settings information is printed on the first page, and the wireless interface information is printed on the next page.
- 4) After the wireless interface information is printed, the self-test is automatically terminated.

Peripherals Connection





- 1. Bluetooth & Wireless Lan Connection
- 1) The printer can be connected to devices equipped with Bluetooth communication capacity (PDAs, PCs, etc.).
- 2) Use the Bluetooth connection function supported by the device to connect to the printer
- 3) The printer can be connected to other stations, such as PDAs and PCs supporting Wireless Lan communication in Ad-hoc mode, Soft AP mode and AP in nfrastructure mode
- Refer to the Bluetooth & Wi-Fi Connection Manual for detailed information on its connection
- You can check the Bluetooth environment (authentication, encryption, connection mode) and the Wireless Lan environment (IP, SSID, authentication, encryption) via the self-test page 2. Interface Cable Connection



- 1) Open the Interface Cap (1).
- 2) Connect the external communication cable
- ② to the cable port of the printer. 3) Connect the interface cable to the USB port
 - of the device (PDAs, PCs, etc.).



The interface cable that can be connected to the printer is the Serial/USB Type-C® cable provided by BIXOLON (optional) or USB Type-C® cable supporting USB2.0.

Product Specifications

| * 1 Todace Specifications | | | | | | |
|---------------------------|-----------------|--|---------------------------|--|--|--|
| Item | | Description | | | | |
| | Printing Method | Direct Thermal Printing | | | | |
| | Printing Speed | Up to 127 mm/s (5 ips) | | | | |
| | Resolution | 203 dpi | | | | |
| | Font | 10 SLCS Resident Bitmap Fonts | | | | |
| | | One SLCS Resident Scalable Font | | | | |
| | | 16 BPL-Z™ Resident Bitmap Fonts | | | | |
| | | One BPL-Z™ Resident Scalable Font | | | | |
| | | 7 BPL-C™ Resident Bitmap Fonts | | | | |
| | | 23 Code Page | | | | |
| | | Unicode supported (UTF-8, UTF-16LE, UTF-16BE) | | | | |
| Printing | Barcode | 1D: Codabar, Code 11, Code 39, Code 93, Code 128, | | | | |
| | | EAN-13, EAN-8, Industrial 2-of-5, Interleaved 2-of-5, | | | | |
| | | Logmars, MSI, Plessey, Postnet, GS1 DataBar (RSS-14), | | | | |
| | | Standard 2-of-5, UPC/EAN extensions, UPC-A, UPC-E, IMB | | | | |
| | | 2D: Aztec, Codablock, Code 49, Data Matrix, MaxiCode, | | | | |
| | | MicroPDF417, PDF417, QR code, TLC 39 | | | | |
| | Emulation | SLCS, BPL-Z™, BPL-C™ | | | | |
| | Sensor | Gap Sensor, Black Mark Sensor, | | | | |
| | | Media Cover Open Sensor, Peel-off Sensor | | | | |
| | Cutter Type | Tear-bar | | | | |
| | Language | User language supported | | | | |
| | Media Form | Label media | Linerless media | | | |
| Media | Media Type | Thermal Media | Thermal Media | | | |
| | Diameter | Max. Ø66 mm (2.60 inch) | Max. Ø66 mm (2.60 inch) | | | |
| | Width | 25~80 mm (0.99~3.15 inch) | 25~80 mm (0.99~3.15 inch) | | | |
| | Thickness | 0.07~0.19 mm | 0.08 ± 0.01mm | | | |

Printer Cleaning



- 1) Turn off the printer and disconnect all cables from the product.
- 2) Open the media cover and remove any media inside.
- 3) Clean the printhead (A) using the cloth or cotton swab soaked in alcohol (for medical use).
- 4) Using the cloth or cotton swab soaked in alcohol, remove the media dust from the black mark sensor (B). (Sensor could be located in the middle or on left or on riaht)
- 5) Do not use the printer for one to two minutes after cleaning until the liquid has completely evaporated or dried.
- 6) Insert the media and close the media cover . The head is very hot while the printer is running.
 - When cleaning the head, be careful not to touch the heated part of the head with your hands.
 - The head may be damaged by static electricity, etc.



- Be careful not to scratch the head.
- Be sure to use only genuine linerless media supplied by Bixolon.
- Otherwise, post-sale support may not be available.
- · Be sure to turn off the power before you proceed with cleaning.
- · When using linerless media, clean the head periodically after using 4 rolls of media (100 m) or at least once a week. Otherwise, the product may fail and print quality
- may be compromised.

WEEE



This marking shown on the product or its literature, indicates that it should not be disposed of with other household wastes at the end of its working life. To prevent possible harm to the environment or people from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not he mixed with other commercial wastes for disposal

Battery Safety Precautions

- 1. If the battery is not charged after the charging time, stop charging and contact the seller
- 2. Store and use the battery where it will not come into direct contact with liquid (water, salt water etc.) as there may be a risk of overheating, rupturing or igniting.
- 3. Avoid exposing the battery to high temperatures over 50 °C and do not store or use it in a place with high temperature and humidity. There may be a risk of overheating, rupturing or igniting. In addition, it may reduce the performance and life of the battery. There is a risk of explosion, especially when the battery is placed by a fire or stored near a heating device (e.g., heater, etc.).
- 4. Be sure to only use an adapter or charger approved by us to charge the battery. Use of any other adapter or charger may reduce battery performance and life, or cause a risk of overheating, rupturing or igniting.
- 5. Avoid causing any strong impact to the battery or throwing it. The protective device inside the battery may be damaged, which may reduce the battery performance and life, or there may be a risk of overheating, rupturing or igniting.
- 6. Do not disassemble or modify the battery. The battery contains safety and protection devices to prevent danger. It may reduce battery performance and life due to damage, or there may be a risk of overheating, rupturing or igniting

Safety Precautions



WARNING & CAUTION

Is described as death, physical injuries, serious financial losses, and damage to data etc. that can be caused to the user.

Do not connect multiple products to a single or faulty power outlet. Only use grounded power outlets that meet the industry standard.

Noncompliance may cause electric shock or fire.



Only use authentic products from BIXOLON. The company will not provide post-sale support for damaged or other quality issues that any fake (or refurbished) products may incur



Do not excessively bend or strain the power cord Securely push the power cord all the way into the power outlet lest it remain loose. Make sure to hold the cord tight when separating it from the power outlet. Do not remove the power cord while the product is in use. Noncompliance may cause electric shock or fire.



Keep small accessories or other packaging materials away from young children. Beware: choking hazard. Mishandling the product may incur injuries which may require seeking urgent n





Keep excessive liquids away from the power cord and outlet. If matter is smeared onto the power cords, wipe with a dry cloth. ncompliance may cause electric shock or fire.



Do not allow the product to be damaged by heavy objects. Noncompliance may cause electric shock or fire.



If the product emits a strange sound, burning smell, or smoke, turn off the power immediately and unplug the power cord. If the product is dropped or its exterior is damaged, turn off the power immediately and unplug the power cord. Do not subject the product to shock. This could cause damage product or a fire.





Install the product in a fixed place preventing it from tipping over. When moving the product, turn off the power and disconnect all connected cables, including the power cord. It may damage the product.



Never independently disassemble, repair, or modify the product as the warranty will become invalid. When repair is necessary, contact the original place of purchase.



Do not let any foreign substances enter the product. Do not place heavy objects, liquids, or metals on the product. This could cause damage to the product or a fire.



If there is a problem with the product, please contact the original place of purchase or through BIXOLON website's product repair page (http://www.bixole



프린터 설치 안내서

모바일 프린터 XM7-30

본 설치 안내서는 제품 설치에 필요한 간단한 정보만 기록하고 있습니다. 자세한 설치 안내는 웹사이트의 사용 설명서를 참고하십시오. 웹사이트에 포함되어있는 내용은 아래와 같습니다.

- 1, 매뉴얼: 사용자, 블루투스 & 와이파이 연결, SLCS 프로그래밍, 코드 페이지, 소프트웨어
- 2. 드라이버: Windows, OPOS, Linux & Mac CUPS
- 3. SDK: Android, Linux, Windows, iOS
- 4. 유틸리티: Net Configuration Tool, Unified Label Utility-II
- 5. 라벨 디자인: Label Artist-II

저희 빅솔론은 제품의 기능과 품질 향상을 위하여 지속적인 개선을 하고 있습니다.

이로 인하여 제품의 사양과 매뉴얼의 내용은 사전 통보 없이 변경될 수 있습니다.

빅솔론의 본사 및 지사 주소와 전화번호는 빅솔론 홈페이지를 참고하시기 바랍니다









전원 코드








미디어 디스크 (지관 내경 12mm (0.47 inch)

◈ 제품의 주요 명칭



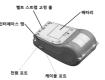

설치 및 충전

배터리

축전



- 1) 그림과 같이 프리터 밀명에 배터리의 훅(hook)을 결합하세요.
- 2) 딸깍하는 소리가 날 때까지 프린터에 배터리를 밀어 넣으세요.

배터리는 충전되지 않은 상태로 판매됩니다









- 1) 열림 버튼을 눌러 미디어 커버를 열어주세요.
- 2) 홈더를 그림과 같이 벌린 후, 미디어를 넣어주세요.
- 3) 미디어를 넣을 때에는 미디어의 방향이 정확하지 확인하세요
- 4) 그림과 같이 미디어를 앞으로 당긴 다음 미디어 커버를 닫아주세요.
- 1) 프린터 전원을 꺼주세요.
- 2) AC/DC 어댑터 ①에 저워 코드 ②를 연결하고 AC 전원을 연결하세요.
- 3) ③의 방향으로 외부 인터페이스 보호캡을 열어 주세요.
- 4) 충전 포트에 AC/DC 어댑터를 연결하세요.

선치

스트램



- 1. 벨트 스트랩 고정혹에 벨트 스트랩의 스크류록 산인하세요
- 2. 그림과 같이 동전 등으로 벨트 스트랩 스크류를 체결하세요.

◈ 조작부 사용법









전원 버튼

미디어 이송 버튼 이 버튼은 전원을 켜거나 끌 때, LCD 메인 메뉴 복귀/동작 실행 시 사용합니다.

- 1) 프린터가 꺼졌을 때 이 버튼을 2 초 정도 누르고 있으면 전원이 켜집니다.
- 2) 그리고 프린터가 켜져 있을 때 2 초 동안 이 버튼을 누르면 전원이 꺼집니다.
- 3) LCD 메뉴를 조작 중인 상태에서 이 버튼을 누르면 메인 메뉴로 이동하거나, 메뉴에서 선택된 동작이 실행됩니다

• 미디어 이송 버튼

이 버튼은 미디어를 이송하거나, LCD 메뉴에서 전 단계로 복귀 시 사용합니다.

- 1) 프린터가 부팅되는 동안 이 버튼을 누르고 있으면 셀프테스트 페이지가출력됩니다.
- 2) 부팅이 완료된 후 대기상태에서 이 버튼을 누르면 미디어를 이송합니다.
 - 3) LCD 메뉴 이동 후, 이 버튼을 누르면 이전 메뉴로 되돌아 갑니다.

• 메뉴 이동 버튼

이 버튼은 원하는 LCD 메뉴로 이동하기 위해 사용합니다.

이 버튼을 누르면 ICD 메뉴가 좌측 상단부터 우측 하단 순서대로 이동됩니다.

• 메뉴 선택 버튼

이 버튼은 I CD 메뉴록 선택할 때 사용합니다.

이 버튼을 누르면 LCD 메뉴가 선택되거나, 선택된 설정이 프린터에 저장됩니다.

◈ 셀프 테스트


이 기능은 다른 장치나 소프트웨어와 독립적으로 동작 합니다.

프리터를 처음 석정하거나 무제가 있을 경우 식해하여 프리터의 석정 정부를 화의할 수 있습니다. 셀프 테스트 결과 프린터에 문제가 없을 경우 다른 장치나 소프트웨어에 문제가 있을 수 있습니다.

- 셀프 테스트 방법
 - 1) 프린터 전원을 켜고 LCD 의 도구 > 프린터설정인쇄 메뉴로 이동합니다.
 - 2) 저워버트(Print)을 누르며 셀프 테스트가 실행된니다
 - 3) 첫 페이지에 프린터 설정정보가 인쇄되고, 다음페이지에 무선인터페이스 정보가 축력됩니다.
 - 4) 무선인터페이스 정보가 축력되고 나면 셀프 테스트가 자동으로 종료됩니다

외부 장치 연결



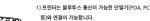

등)와 연결이 가능합니다. 2) 단말기에서 지원하는 블루투스 연결 기능을 사용하여 프린터와 연결합니다. 프린터에 내장된 NFC 태그를

이용하여 단말기와 프린터간 자동 페어링이 가능합니다. 3) 프린터는 Ad-hoc 모드, Soft AP 모드를 통해 무선랜 통신이 가능한 단말기(PDA, PC 등)와 연결이 가능하며,

Infrastructure 모드를 통해 AP 와 연결이 가능합니다 • 자세한 내용은 블루투스 & 와이파이 연결매뉴얼을 참고하세요.



- 설정된 블루투스 환경(authentication, Encryption, connection mode)및 무선랜
- 환경(IP, SSID, authentication, encryption)은 셀프 테스트를 통하여 확인할 수 있습니다.



2. 인터페이스 케이블 연결

1. 블루투스 및 무선래 연결

- 1) ① 인터페이스 캡을 열어 주세요.
- 2) 프린터의 케이블 포트에 인터페이스 케이블 ②을 연결해주세요.
- 3) 단말기 (PDA, PC 등)의 USB 포트에 인터페이스 케이블을 연결합니다.



인터페이스 케이블은 USB2.0 을 지원하는 USB Type-C® 케이블을 사용하거나, 빅솔론에서 공급(별도판매)하는 시리얼 또는 USB Type-C® 케이블을 사용할 수 있습니다.

- 반드시 전원을 종료하고, 배터리를 충전하세요.
- 반드시 빅솔론에서 공급하는 정품만 사용하세요.
- 그렇지 않을 경우 제품의 고장 원인이 되거나 사용자의 부상 위험이 있습니다.

| ◈ 제품 사양서 | | | | | | |
|----------|--------|---|---------------------------|--|--|--|
| 항목 | | 설명 | | | | |
| 인쇄 | 인쇄 방식 | 감열 방식 인쇄 | | | | |
| | 인쇄 속도 | 최대 127 mm/s (5 ips) | | | | |
| | 해상도 | 203 dpi | | | | |
| | 폰트 | 10 SLCS Resident Bitmap Fonts One SLCS Resident Scalable Font 16 BPL-Z [™] Resident Bitmap Fonts One BPL-Z [™] Resident Scalable Font 7 BPL-Z [™] Resident Scalable Font 23 Code Page Unicode supported (UTF-8, UTF-16LE, UTF-16BE) | | | | |
| | 바코드 | 1 朴智: Codabar, Code 11, Code 39, Code 93, Code 128, EAN-13, EAN-8, Industrial 2-of-5, Interleaved 2-of-5, Logmars, MSJ, Plessey, Postnet, GS1 DataBar (RSS-14), Standard 2-of-5, UPC/EAN extensions, UPC-A, UPC-E, IMB 2 片智: Aztec, Codabilock, Code 49, Data Matrix, MaxiCode, MicroPDF417, PDF417, QR code, TLC 39 | | | | |
| | 에뮬레이션 | SLCS, BPL-Z™, BPL-C™ | | | | |
| | 센서 | 갭 센서, 블랙마크 센서, 미디어 커버 센서, 필러 센서 | | | | |
| | 커터 유형 | 매뉴얼 커터(Tear-bar) | | | | |
| | 언어 | 고객 언어 지원 | | | | |
| REID | 주파수 | UHF, 865~868MHz(EU), 902~928MHz(KR, USA) | | | | |
| K+ID | 프로토콜 | ISO 18000-6C(EPC Class1 Gen2) | | | | |
| | 미디어 형태 | 라벨 미디어 | 라이너리스 미디어 | | | |
| 미디어 | 미디어 종류 | 감열지 | 감열지 | | | |
| | 미디어 외경 | 최대 Ø66 mm (2.60 inch) | 최대 Ø66 mm (2.60 inch) | | | |
| | 폭 | 25-80 mm (0.99-3.15 inch) | 25~80 mm (0.99~3.15 inch) | | | |
| | 두께 | 0.07~0.19 mm | 0.08 ± 0.01mm | | | |

◈ 프린터 청소



- 1) 프린터의 전원을 종료하고 모든 케이블을 제품과 분리해주세요.
- 2) 미디어 커버를 열고 미디어가 있으면 제거해주세요.
- 3) 의료용 알코올에 적신 천이나 면봉을 사용하여 프린터의 헤드(A) 부분을 닦아주세요.
- 4) 의료용 알코올에 적신 천이나 면봉으로 미디어 센서(R)의 지분(미디어 가루)을 제거해주세요. (센서는 제품사양에 따라 중앙 또는 좌측 또는 우측에 위치하고 있습니다.)
- 5) 청소 후 의료용 알코올이 완전히 증발하여 건조될 때까지 1~2 분 동안 프린터를 사용하지 마세요. 6) 프린터에 미디어를 넣고 프린터 커버를 닫아주세요.
 - 프린터가 동작하는 동안 헤드부분은 매우 뜨거워져 있습니다. 헤드 청소 시 손으로 헤드의 가열부를 만지지 않도록 주의하세요.

 - 헤드가 정전기 등에 의해 손상을 입을 수 있습니다.
 - 헤드에 흠집이 발생하지 않도록 주의하세요.
 - 반드시 빅솔론에서 공급하는 정품 라이너리스 미디어만 사용하세요.



- 그렇지 않을 경우 A/S 지원이 어려울 수 있습니다.
- 반드시 전원을 종료하고, 청소를 진행해주세요. • 라이너리스 미디어 사용 시 미디어 4 롤 (100 미터) 사용 후 혹은 일주일에 1 회 이상
- 주기적으로 헤드를 청소해 주세요. 그렇지 않을 경우 제품 고장 및 인쇄품질에 영향을 줄 수 있습니다.

◈ 배터리 안전 주의사항

- 1. 충전 시 소정의 충전시간이 지나도 충전이 되지 않을 경우 충전을 중지하시고, 구매처에 문의하십시오.
- 2. 배터리를 액체(물, 염수 등)에 닿지 않는 곳에서 보관 및 사용하십시오. 배터리의 발열·파열·발화 등의 위험이 있습니다
- 3. 배터리를 50℃이상의 고온 노출은 피하고, 고온 다습한 곳에서의 보관 및 사용하지 말아 주십시오. 발열·파열·발화 등의 위험이 있습니다. 또, 배터리의 성능과 수명을 저하시킬 수 있습니다. 특히 배터리를 불 속에 넣거나 발열장치(난방기기 등) 주변에 보관할 경우 폭발의 위험이 있습니다.
- 4. 배터리의 충전은 당사에서 지정한 전용 어댑터 또는 충전기만을 사용해야 하며, 임의의 어댑터 또는 충전기를 사용할 경우 배터리 성능과 수명이 저하되거나 발열 · 파열 · 발화 등의 위험이 있습니다.
- 5. 배터리에 강한 충격을 주거나 던지지 마십시오. 배터리에 들어있는 보호장치가 파괴되어 배터리 성능과 수명이 저하되거나 발열 · 파열 · 발화 등의 위험이 있습니다.
- 6. 배터리를 분해하거나 개조하지 마십시오. 배터리에는 위험을 방지 하기 위한 안전기구 및 보호장치가 들어 있습니다. 손상으로 인한 배터리 성능과 수명이 저하되거나 발열 · 파열 · 발화 등의 위험이 있습니다.

◈ 안전상의 경고



주의 & 경고

사용자의 사망 또는 신체적 손상, 심각한 재산상의 손상,

데이터 등의 정보 손상을 일으킬 가능성이 있는 내용을 설명합니다.

하나의 콘센트에 여러 제품을 동시에 연결하지 마세요. 헐거운 콘센트는 사용하지 마세요. 콘센트는 규격 제품을 사용하세요. 반드시 접지된 콘센트에 전원 코드를 연결하세요. **감깐 및 화재의** 위험이 있습니다.



전원 코드를 무리하게 구부리거나 잡아당기지 마세요. 전원 가 흔들리지 않도록 안쪽 끝까지 정확히 꽂아 주세요. 전원 코드를 콘센트에서 분리할 때에는 반드시 코드를 잡고 분리해 주세요. 제품 사용 중에는 전원코드를 뽑지 마세요.



소형 액세서리 또는 포장품은 아이의 손에 닿지 않는 곳에 **바세요. 아이가 삼키지 않도록 주의하** 제품은 잘못 다무어 부상의 위험이 있습니다.

반드시 빅솔론에서 공급하는 정품만

사용하세요. 유사품(재생품) 사용으로 인한

제품손상에 대한 품질 및 A/S 책임을 지지

전원 코드를 꽂을 때 뽑을 때 젖은 손으로 만지지 마세요. 전원 코드의 핀 부위 또는 콘센트에 이물질이 묻어 있을 때에는 마른 천으로 깨끗이 닦아주세요. 강경 및 화재의 위험이 있습니다



무거운 물건에 눌리지 않도록 주의하세요. 감전 및 화재의 위험이 있습니다.

제품에서 이상한 소리,타는 냄새,연기가나면 즉시전원을 끄고 전원코드를쨉아주세요.제품을떨어뜨리거나외관이파손된 경우즉시전원을 끄고전원 코드를 뽑아주세요.제품에 충격을 주지마세요.**회재의 위험이 있습니다.** 계류 손사의 위험이 있습니다.



제품은 백과 일정거리를 두어 통풍이 잘되는 곳에 설치하세요 미세 어지가 많이 박생하는 곳 오두가 너무 높거나 남은 곳 숨기나 물이 많은 곳, 장시간 연속적으로 사용하는 공항이나 역 등 특수한 장소에 설치된 제품은 주변 환경의 영향으로 심각한 품질 문제가 발생할 수 있습니다. **내부 운도 상송으로 인한 화제의** 용어이 돈 수 있습니다. 왕드시 구입철에 문의 후 생활하세요.



제품이 넘어지지 않도록 고전된 장소에 설치하세요 제품을 옮길 때에는 전원을 끄고 전원 코드 등 제품에 연결된 모든 선을 뽑아주세요. 제품을 들어서 옮길 때에는



사용자 임의로 절대 분리, 수리, 개조하지 마세요. 수리가 필요함 때에는 구인처로 연락하세요.



제품 내부에 이목질이 들어가지 않도록 주의하세요. 제품 위에 무거운 물건이나 액체류나 금속류를 옥려놓지 마세요. 함께의 위험이 있습니다.



제품의 문제가 생겼을 경우 구입처로 연락하세요 또한, 박술은 홈페이지 (http://www.bixolon.co.kr) 에서 제품 수리 등영상을 제공하고 있습니다.



Printer Installation Guide

Mobile Printer XM7-30

Information

This installation guide contains quick information required for the product installation. Refer to the User's Manual in the website that comes with the product for detailed installation instructions. The website contains the following information

- 1. Manual: User's, Bluetooth & Wi-Fi Connection, SLCS Programming, Code Pages, Software
- 2. Driver: Windows, OPOS, Linux & Mac CUPS
- 3. SDK: Android, Linux, Windows, iOS
- 4. Utility: Net Configuration Tool, Unified Label Utility-II
- 5. Label Design: Label Artist-II

We at BIXOLON Co., Ltd. maintain ongoing efforts to enhance and upgrade the functions and quality of all our products. The following, product specifications and/or user manual content may be changed without prior notice.

Please refer to the BIXOLON website for the addresses and phone numbers of the company's headquarters and branch offices.

Content Confirmation










Guide Disks



m (0.47 inch

Product Part Names

Relt Stran

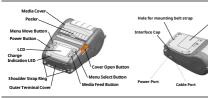

Installation and Charging





- 1) Insert the battery to the bottom of the printer, and ensure that you align the battery hook correctly.
- 2) Push the battery into the slot until you hear it snap in place.




Media

Installation

The battery is sold uncharged.



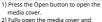

- insert the media as shown. (Remove the empty media core)
- 3) Check the orientation of the media when inserting it into the printer. 4) Pull out the media as shown and close the media cover.





- 2) Connect the power cord ② to the AC/DC adapter ① and then connect AC power
- 3) Open the external interface cap in the direction of 3).
- 4) Connect the AC/DC adapter to the power port.



Battery

Charging

 The printer may incur serious damage if the AC/DC adapter provided by BIXOLON is not used. BIXOLON is not legally liable for any such damages. . The voltage and electrical current specifications of the printer and battery charges

must match.)

Belt Strap Installation



- 1) Insert the belt strap screw into the belt strap hole
- 2) Use a coin to tighten the belt strap screw. As shown in the image.

Control Panel Usage





Media Feed Button





Power Button

This button is used to turn the printer on, off, to move to main menu or to operate the

- 1) When the printer is off, press this button for approximately 2 seconds to turn on
- the powe 2) When the printer is on, press this button for approximately 2 seconds to turn off
- the power 3) Pressing this button while the LCD menu is being operated moves to the main menu or to operate the selected action from the menu.

Media Feed Button

- This button is used to feed the media manually or return to the previous step.
- 1) Press and hold this button while the printer is booting to print a self-test page.
- 2) Press this button in the standby mode to feed the media.
- Press this button to return to the previous menu.

Menu Move Button

This button is used to move the LCD menu.

Press this button to move the LCD menu from the top left to the bottom right.

Menu Select Button

This button is used to select the LCD menu.

Press this button to select the LCD menu or save the selected settings to the printer.

This function is independent of such other devices and software.

Run the self-test to check the setting information when you are setting up the printer for the

If no issue is found with the printer after running the self-test, examine the other devices running on the system or peripherals and software.

Self-Test Instructions

- 1) Turn the printer power on and go to Tools > Print Printer Config menu on the LCD
- 2) Press the power button (Print) to run the self-test.
- 3) The printer settings information is printed on the first page, and the wireless interface information is printed on the next page.
- 4) After the wireless interface information is printed, the self-test is automatically terminated.

Peripherals Connection





- 1. Bluetooth & Wireless Lan Connection
- 1) The printer can be connected to devices equipped with Bluetooth communication capacity (PDAs, PCs, etc.).
- 2) Use the Bluetooth connection function supported by the device to connect to the printer
- 3) The printer can be connected to other stations, such as PDAs and PCs supporting Wireless Lan communication in Ad-hoc mode, Soft AP mode and AP in nfrastructure mode
- Refer to the Bluetooth & Wi-Fi Connection Manual for detailed information on its connection
- You can check the Bluetooth environment (authentication, encryption, connection mode) and the Wireless Lan environment (IP, SSID, authentication, encryption) via the self-test page
 - 2. Interface Cable Connection 1) Open the Interface Cap (1).
 - 2) Connect the external communication cable ② to the cable port of the printer. 3) Connect the interface cable to the USB port
 - of the device (PDAs, PCs, etc.).



The interface cable that can be connected to the printer is the Serial/USB Type-C® cable provided by BIXOLON (optional) or USB Type-C® cable supporting USB2.0.

Product Specifications

| * 110ddcc Specifications | | | | | | |
|--------------------------|-----------------|--|---------------------------|--|--|--|
| Item | | Description | | | | |
| | Printing Method | Direct Thermal Printing | | | | |
| | Printing Speed | Up to 127 mm/s (5 ips) | | | | |
| | Resolution | 203 dpi | | | | |
| | Font | 10 SLCS Resident Bitmap Fonts | | | | |
| | | One SLCS Resident Scalable Font | | | | |
| | | 16 BPL-Z™ Resident Bitmap Fonts | | | | |
| | | One BPL-Z™ Resident Scalable Font | | | | |
| | | 7 BPL-C™ Resident Bitmap Fonts | | | | |
| | | 23 Code Page | | | | |
| | | Unicode supported (UTF-8, UTF-16LE, UTF-16BE) | | | | |
| Printing | Barcode | 1D: Codabar, Code 11, Code 39, Code 93, Code 128, | | | | |
| | | EAN-13, EAN-8, Industrial 2-of-5, Interleaved 2-of-5, | | | | |
| | | Logmars, MSI, Plessey, Postnet, GS1 DataBar (RSS-14), | | | | |
| | | Standard 2-of-5, UPC/EAN extensions, UPC-A, UPC-E, IMB | | | | |
| | | 2D: Aztec, Codablock, Code 49, Data Matrix, MaxiCode, | | | | |
| | | MicroPDF417, PDF417, QR code, TLC 39 | | | | |
| | Emulation | SLCS, BPL-Z™, BPL-C™ | | | | |
| | Sensor | Gap Sensor, Black Mark Sensor, | | | | |
| | | Media Cover Open Sensor, Peel-off Sensor | | | | |
| | Cutter Type | Tear-bar | | | | |
| | Language | User language supported | | | | |
| | Media Form | Label media | Linerless media | | | |
| Media | Media Type | Thermal Media | Thermal Media | | | |
| | Diameter | Max. Ø66 mm (2.60 inch) | Max. Ø66 mm (2.60 inch) | | | |
| | Width | 25~80 mm (0.99~3.15 inch) | 25~80 mm (0.99~3.15 inch) | | | |
| | Thickness | 0.07~0.19 mm | 0.08 ± 0.01mm | | | |

Printer Cleaning



- 1) Turn off the printer and disconnect all cables from the product.
- 2) Open the media cover and remove any media inside.
- 3) Clean the printhead (A) using the cloth or cotton swab soaked in alcohol (for medical use).
- 4) Using the cloth or cotton swab soaked in alcohol, remove the media dust from the black mark sensor (B). (Sensor could be located in the middle or on left or on riaht)
- 5) Do not use the printer for one to two minutes after cleaning until the liquid has completely evaporated or dried.
- 6) Insert the media and close the media cover . The head is very hot while the printer is running.
 - When cleaning the head, be careful not to touch the heated part of the head with your hands.
 - The head may be damaged by static electricity, etc.



- Be careful not to scratch the head.
- Be sure to use only genuine linerless media supplied by Bixolon. Otherwise, post-sale support may not be available.
- · Be sure to turn off the power before you proceed with cleaning.
- · When using linerless media, clean the head periodically after using 4 rolls of media (100 m) or at least once a week. Otherwise, the product may fail and print quality
- may be compromised.

WEEE



This marking shown on the product or its literature, indicates that it should not be disposed of with other household wastes at the end of its working life. To prevent possible harm to the environment or people from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not he mixed with other commercial wastes for disposal

Battery Safety Precautions

- 1. If the battery is not charged after the charging time, stop charging and contact the seller
- 2. Store and use the battery where it will not come into direct contact with liquid (water, salt water etc.) as there may be a risk of overheating, rupturing or igniting.
- 3. Avoid exposing the battery to high temperatures over 50 °C and do not store or use it in a place with high temperature and humidity. There may be a risk of overheating, rupturing or igniting. In addition, it may reduce the performance and life of the battery. There is a risk of explosion, especially when the battery is placed by a fire or stored near a heating device (e.g., heater, etc.).
- 4. Be sure to only use an adapter or charger approved by us to charge the battery. Use of any other adapter or charger may reduce battery performance and life, or cause a risk of overheating, rupturing or igniting.
- 5. Avoid causing any strong impact to the battery or throwing it. The protective device inside the battery may be damaged, which may reduce the battery performance and life, or there may be a risk of overheating, rupturing or igniting.
- 6. Do not disassemble or modify the battery. The battery contains safety and protection devices to prevent danger. It may reduce battery performance and life due to damage, or there may be a risk of overheating, rupturing or igniting

Safety Precautions



WARNING & CAUTION

Is described as death, physical injuries, serious financial losses, and damage to data etc. that can be caused to the user.

Do not connect multiple products to a single or faulty power outlet. Only use grounded power outlets that meet the industry standard.

Noncompliance may cause electric shock or fire.



Only use authentic products from BIXOLON. The company will not provide post-sale support for damaged or other quality issues that any fake (or refurbished) products may incur



Do not excessively bend or strain the power cord Securely push the power cord all the way into the power outlet lest it remain loose. Make sure to hold the cord tight when separating it from the power outlet. Do not remove the power cord while the product is in use. Noncompliance may



away from young children. Beware: choking hazaro Mishandling the product may incur injuries which may require seeking urgent medical





Keep excessive liquids away from the power cord and outlet. If matter is smeared onto the power cords, wipe with a dry cloth Noncompliance may cause electric shock



Do not allow the product to be damaged by heavy objects. Noncompliance may cause electric shock or fire.



If the product emits a strange sound, burning smell, or smoke, turn off the power immediately and unplug the power cord. If the product is dropped or its exterior is damaged, turn off the power immediately and unplug the power cord. Do not subject the product to shock. This could cause damage product or a fire





Install the product in a fixed place preventing it from tipping over. When moving the product, turn off the power and disconnect all connected cables, including the power cord. It may damage the product.



Never independently disassemble, repair, or modify the product as the warranty will become invalid. When repair is necessary, contact the original place of purchase.



Do not let any foreign substances enter the product. Do not place heavy objects, liquids, or metals on the product. This could cause damage to the product or a fire.



If there is a problem with the product. please contact the original place of purchase or through BIXOLON website's product repair page



دليل تثبيت الطابعة

الطابعة المحمولة 30-XM7

ادخل برغي حزام التثبيت في الفتحة الخاصة به.
 استخدم قطعة عملة معدنية في ربط برغي حزام التثبيت بإحكام. كما هو موضح في الشكل.

﴿ استخدام لوحة التحكم













زر تحريك القاتمة

 زر الطاقة ر التصفح هند هذا الزر في تشغيل أو ايقف تشغيل الطابعة أو في الانتقال إلى القائمة الرئيسية أو في تتفيذ إجراءات

أبعد إيقاف تشغيل الطابعة، اضغط هذا الزر لمدة ثانيتين (2) تقريبا لتشغيل الطاقة.

بعد تشغيل الطابعة، اضغط هذا الزر لعدة ثانيتين (2) تقريبا إلوقاف تشغيل الطاقة.

الصحة. 3) يؤدي ضغط هذا الزر أثناء تشغيل قلمة LCD للانتقال إلى القائمة الرئيسية أو تشغيل الإجراء المحدد من القائمة.

• زر تغنية الوسائط

رر معنو الوسطة. تفتم ها أن م تغذيه أنو ستط بدويا أو الرجوع إلى المطوة السابقة. 2) استخط مع الاستخرار على هذا الأور الثانية وده تشغيل الطابعة لطباعة صفحة اختيار ذاتي. 3) استخط على هذا الأور للرجوع إلى القائمة السابقة. 3) استخط على هذا الأور للرجوع إلى القائمة السابقة.

- زر تحريك القائمة
 - زر تحريك القائمة LCD.
 استخدم هذا الزر لتحريك قائمة LCD من أعلى اليسار إلى أسغل اليمين.

• زر تحديد القاتمة بستخدم هذا الزر لتحديد قائمة LCD.

ضغط هذا الذر لتحديد قائمة CD أو حفظ الإعدادات المحددة للطابعة

﴿ الاختبار الذاتي

هذه الوظيفة على تلك الأجهزة والبرمجوات الأخرى. شغل الاختبار الذاتي للتحقق من معلومات الإعداد عندما تقوم بإعداد الطابعة لأول مرة أو في حال حدوث مشكلة. إذا لم يعثر على مشاكل في الطابعة بعد تشعيل الاختبار الذاتي، افحص الأجيزة الأخرى العاملة المتصلة بالنظام أو الأجيزة الطرفية والبرمجيان

تعليمات الاختبار الذاتي

ميشان الاختيار من المتعادل ال 2) انسط أرا المتعادل المتعادل المتعادل التعادل التعادل التعادل التعادل المتعادل المتعادل

توصيل الأجهزة الطرفية



ُ. الترصيل عبر بلوتوث (LAN الدسلكية 1) الطابعة قابلة الترصيل بالأجهزة التي تشتمل على إمكانات الترصيل عبر بلوتوث (PDAs و PCs و PCs رصا إلى ذلك). 2) استخدر وظيفة التوصيل عبر بلوتوث التي يدعمها الجهاز للتوصيل 4-11-1 الطابعة قابلة للتوصيل بالمحطات الأخرى،

ا طبعة ديمة الموصول بالمعطف الإخرى. مثل أجهزة PDAs و PCS التي تدعم الاتصال عبر LAN اللاسلكية في النمط المخصص ونعط Soft AP ونعط AP في البنزة



ارجع إلى دليل التوصيل عبر بلوتوث وواي فاي المصول على معلومات تفصيلية عن طرق التوصيل هذه.

 بمكتك التحقق من بيئة بلوتوث (المصادقة والتشفا منت التعلق من بهنه بوتوت (المصدية والتنظير ونمط التوصيل) وبينة LAN اللاسلكية (بروتوكول الإنترنت (IP) واسم الشبكة (SSID) والمصادقة التشفير) عبر صفحة الاختبار الذاتي. 2. توصيل كيل الواجهة



1) افتح غطاء الواجهة (1).

2) قم بتوصيل كابل الاتصالات الخارجي ② بمنفذ الكابل في الطابعة. قم بتوصيل كابل الواجهة بمنفذ USB في الجهاز (أجيزة PDAs) و PCs وما إلى ذلك).

كابل الواجهة الفابل للتوصيل بالطابحة هو الكابل التسلسلي/كابل USB من الدوع ©C العزود من قبل BIXOLON (اختياري) أو كابل USB من نوع ©C الذي يدعم USB2.0.

جنوي دابل التثبيت هذا على المعلومات السريعة المعلموبة لتتباريت المنتج. في لما ين مستخدم المنتج العناح على العوقع الإكتاروني الدهمول على تعليمات انتثبيت انتفصيلية. يحتوي العوقع الإلكتروني على المعلومات التافية

- الدلول: المستخدم التوصيل عبر بلوتوث وواي فاي، برحجة SLCS صفحات الكود، البرمجيات
 نظام التشغول: Windows, OPOS, Linux & Mac CUPS
 - - 2. SDK: Android, Linux, Windows, iOS .3 4. الأدوات المساعدة: أداة تهيئة الشيكة، والأداة المساعدة للملصق الموحد-2
 - 5. تَصَمَّرِم الملصق: Label Artist-II

حن شركة BIXOLON المحدودة حريصون باستمرار على بنل كقة الجهود لتحسين وترقية وظائف وجودة جميع منتجلتا. وبناءا عليه، ريمكن أن تتغير مواصفات المنتج و / أو حقورات دليل المستخدم بدون أشعار مستود مسعون وربوء وصعف وجوده جميع منطبطت، يمكن أن تتغير مواصفات المنتج و / أو حقورات دليل المستخدم بدون أشعار مستون. يرجمي الرجوع إلى موقع BIXOLON على الإنترنت للتمرف على العناوين وأرقام الهاتف الخاصة بمقر الشركة ومكتب الغروع.

تأكيد المحتويات







حزام تثبیت ﴿ أسماء أجزاء المنتج





السلك الكهرباتي

التثبيت والشحن

O

شمن البطارية



1) ادخل البطارية في أسفل الطابعة، ويكد من صداة الطابعة، ويكد من صداة خطاف البطارية بشكل ملائم. 2) ادفع البطارية في الفتحة حتى تسمع صدرت نقرة وذل على التثبيت في المكان الص

تُباع البطارية غير مشحونة.



 الضغط زر الفتح لفتح غطاء الوسائط.
 الفتح غطاء الوسائط بشكل كامل وادخل الوسائط بالشكل الموضح. (أزل مركز الوسائط الفارغ).
 كمقق من اتجاه الوسائط عند إدخالها في الطابعة.) اسحب الوسائط كما هو موضح واغلق غطاء الوسائط.



4) صلّ محول التيار المتردد/ التيار المباشر بمنفذ

• يمكن أن تسبب الطابعة الضرر الجسيم في حالة عدم استخدام مهايئ التيار المتردد/ التيار المباشر

المزود من BIXOLON لا تتحمل BIXOLON المسرولية القائولية عن أي من هذه الأضرار. • (يجب أن تكون مواصفات الجهد الكهربي والتيار الكهربي للطابعة وشاحن البطارية

احتياطات السلامة



التحذير والتنبيه

____ كوصف بأنها وفاة وإصابات جمدية وخسائر مالية خطيرة وأضرار تلحق بالبيانات وما إلى ذلك ويمكن أن تلحق بالمستخدم

لا تقم بتوصيل العديد من المنتجات بمقبس كهرباء أحادي أو معیب. لا تستخدم سوی مقابس کهرباه مورضهٔ تستوفی م



لا تقر شي أو شد الساك الكير بي أكثر من اللاز جر انحل السلك الكير بي يشكل كلمل في مقبل الكير باده مثني يؤلت بابدكاء بالكتر من الإمساك بالسلك بابدكام عند السلمة من هناس الكير بادار لا تقرع بسك الكير باد الله استخدا المشتخع بدكان أن يضيب عدم الشرائق في الصدمة الكيرية أن الأمورية



احتفظ بالسوائل الزائدة بعيدًا عن سلك الكيرباء والمقبس. في حالة تلطح أسلاك الكيرباء بأي مواد، اسمحها بقطمة قماش جافة. يمكن أن يتسبب عدم الثوافق في الصحمة الكهربية أو الحريق.

قم بتثبيت المنتج في مكان ثابت بحوث لا يكون عرضة للانقلاب. عند تحريك المنتج، اوقف تشغل الطاقة والعمل كل الكابلات الموصولة، بما في ذلك السلك الكهربي. قد يتسبب ذلك في تلف المنتج.

لا تسمح لأي مواد غريبة بدخول المنتج. لا تضع أي أشياء ثقيلة أو سوائل أو معدن

العصم. وسعل. الدلاع حريق.

السغار . احترس: خطر الاختتاق. يعكن أن يودي سوم التعامل مع المنتج إلى حدوث إصابات قد تتطلب التعان ، العقابة الطبية العاملة .



لا نعرض المنتج للأشياء الثقيلة حتى لا يحدث تلف. يمكن أن يتسبب عدم التوافق في الصدمة الكهربية أو



إذا كان المنتج يصدر صوتًا غريبًا أو بنبث منه رائحة امتراق أو حفان، وأوقت تشغيل الطاقة فرزا والزع السلك الكيربي من مقيس الكيرباء. في حلة منه ما المنتج أو تمو من علاقه المارجي اللمر ر، أو قف تشغيل الملقة راف تنطق المفحد فرد وطرح مست معوري من سبب حالة سقوط الملتق أو تعرض غالفه الخارجي للمنزر، اوقف تثا فرزا والزاح السلك الكهربي من مقيس الكيرياء. لا تعرض الملتخ يمكن أن يتمنيب تلك في إلحاق الضور بالمنتج أو اندلاع حريق.



في حال وجود أي مشكلة في المنتج، يرجى الاتصال بمكان الشراء الأصلي أو الاتصال عبر صفحة إصلاح المنتجات في موقع BIXOLON على الإنترنت



لـ بالملحقات الصنغيرة أو مواد التغليف الأخرى بعيدًا عن متناول الأطفال

لا تستخدم سوى المنتجات الأصلية من BIXOLON. أن تقع الشركة دعم ما يعد البيع في حالة الثلف أو المشاكل الأخرى المتعلقة بالجورة التي يعكن أن تحدث تنهجة لاستخدام منتجات مقدة (أو مجددة).









لا تقم أبدًا بتفكيك أو إصلاح أو تحديل المنتج حتى لا ر بي مسمس دعو. متى كان الإصلاح ضروريًا، اتصل بمكان الشراء الأصلى.



.(http://www.bixolon.c



مواصفات المنتج

| صف | البند | | | | |
|---------------------------------|--|---------------|---------|--|--|
| | طباعة حرارية مباشرة | طريقة الطباعة | | | |
| | سرعة الطباعة | | | | |
| | الاستبقة | | | | |
| SL | | | | | |
| إحد | | | | | |
| BP | | | | | |
| B واحد | PL-Z™ Resident Scalable | الخط | | | |
| BPL | 7 خطوط Resident Bitmap ™C. | | | | |
| | 23 صفحة كود | | | | |
| Unicode (UTF-8 | | | | | |
| Codabar, Code 11, Code 39, Co | أحادي الأبعاد: ,de 93, Code 128 | الباركود | الطباعة | | |
| | ial 2-of-5, Interleaved 2-of-5, | | | | |
| Logmars, MSI, Plessey, Post | | | | | |
| Standard 2-of-5, UPC/EAN exte | | | | | |
| Aztec, Codablock, Cod | | | | | |
| | MaxiCode, | | | | |
| MicroPDF417 | | | | | |
| | المحاكاة | | | | |
| يداء، | المستشعر | | | | |
| الانحراف | , | | | | |
| | نوع القاطعة | | | | |
| | اللغة | | | | |
| وسانط غير خطية | وسائط ملصق | شكل الوسانط | | | |
| وسقط حرارية | وساتط حرارية | نوع الوسائط | | | |
| بقطر 66 مم (2.60 بوصة) كحد أقصى | القطر القطر 66 مم (2.60 بوصة) كحد أقصى بقطر 66 مم (2.60 بوصة) كحد أن | | | | |
| 25~80 مم (0.99~3.15 بوصة) | العرض 25-80 مم (0.99-3.15 بوصة) 25-80 مم (0.99-3.15 بوصة | | | | |
| 0.01 ± 0.08 مم | 0.19~0.07 مع | السمك | | | |
| | | | | | |

تنظیف الطابعة



1) اوقف تشغول الطابعة وأزل كل الكابلات من المنتج.

) او هند ساعده ودان ما محبول من هم محبول من همية . 2) تلقى راس الطباعة (A) باستخدام الحادة المساق المستقد المقدم عنفي عنه في الكمول (الاستخدام العلمي). 4) ستمتر قلمه الفندان أو المسحنة الطبقية الطنوع عام إلى المحبول عن تنظيف الرساط من الارادية بدأية من منتشر الطبخة السودة (B). أربطان أن يكون المستشعر في المنتصف أو على البسار أو على اليمين)

ر. ندم الطابعة لمدة دقيقة إلى دقيقتين من بعد التنظيف حتى يتبخر الساتل أو يجف تماثاً.

 ادخل الوسائط واغلق غطاء الوسائط. واعلى علماء الوسده. • يسخن الرأس جدًا أثناء تشغيل الطابعة. عند تنظيف الرأس، التبه لعدم لمس جزء التسخين في الرأس



بيوب. • يمكن أن يتلف الرأس بسبب الكهرباء السكونية وما إلى ذلك.

﴿ نفايات الأجهزة الكهربانية والإليكترونية (WEEE)



نشر هذه قدمته قبوسمة على النتج أو في الأراق الشعابة إلى أنه لا يجب التنفس منه مع الفيات المنزلية الأمرى في الهاء عمر الشعاب والمها المنزلية الأمرى في الهاء عمر الشعاب وليقاع من المنازلية الأمرى في الهاء عمر الشعاب وليقاع في والماء المنازلية الأمرازلية المنازلية الم

احتياطات السلامة للبطارية

- ار إذا لم يشرعه المعرب المعرب
 - - الانفطار أو الأنشان. إنظارة القديمة بالحق إلى المساحة قرية تراتق بالقائدة إيمكن أن تشريض ألية العماية بناها. الطارة القلامة بما يمكن أن يشهد في تطل مستوى أنه أو حود الطارية، أو قد يودي إلى وقد المقارف المعال الطارقية أو الانتظار أو الانتظام المستوى المعالمة المستوى أنه أو معرد المستوى أنه أو عمد المستوى أنه و عمد المستوى أنه أن على عند مضافر المستورة الوائدة أو الانتظام أن الانتظام أن الانتظام أن الانتظام أن الانتظام المستوى أنه و عمد المستورة الوائدة أن الانتظام أن الانتظام أن الانتظام أن الانتظام المستوى أنه أن عمد المستوى ال