

PA700 Rugged Handheld Computer



User's Manual

Version 1.0

Table of content

able of content	2
Package Contents	3
Getting started	4
2.1 Device overview	4
2.2 Assembly	6
Accessing battery, Micro SD card and SIM card	6
2.3 Charging the battery	7
2.4 Data Communicating with PC Device	7
2.5 LED status	8
2.6 To check the battery level and to access the battery usage menu .	8
Basic Operation	10
3.1 Accessing and using applications	10
To open the Application screen	10
To browse the Application screen	10
To create a shortcut to an application on the Home screen	10
To Remove a shortcut of an application on the Home screen	10
Calling	10
Call handling	10
To make a call by dialing	10
To end a call	10
3.2 Barcode Scanning (For Imager Version only)	11
3.3 RFID Sensing	12
Specification	13
Camera and Flash Light	13
ppendix Worldwide Support	15

1. Package Contents





PA700





USB cable

(Standard USB to Micro USB)

Battery



Hand Strap

Charger

Power Plug Adapter



Utility DVD

2. Getting started

Unitech PA700 is an Android platform device. Android platform device has great flexibility that allows you to make customized configurations and enhancements by install and remove Apps.

With Android operation system, your device has limitless possibilities to update to latest features and improvements.

2.1 Device overview





1. Receiver	7. Back button
2. LED indicator	8. Flash LED
3. Search button	9. 5M Camera with AF
4. Microphone.	10. Reset button
5. Menu button	11. RFID antenna
6. Home screen button	12. Mounting screw for battery cover



13. Bar code Scan Engine	15. Volume Down button
14. Scan button	16. Volume Up button



17. Micro USB port	19. Power button
18. Phone jack	20. Scan button

2.2 Assembly

Accessing battery, Micro SD card and SIM card

1. Using a proper tool (ex. a coin) to loosen the two screws on the battery cover by turning anticlockwise.



2. Remove the back cover and pull the battery out.



3. Now you can access the micro SD card slot and SIM card slot.



1. Micro SD card slot

2. SIM card slot

2.3 Charging the battery

Connect PA700 to the charger, it will be charged automatically.

1. Connect the standard USB connector to the charger.



2. Connect the micro USB connector to the micro USB port at the bottom.



3. Plug the AC charger into a wall outlet. If needed, attach a plug converter onto the AC charger.



2.4 Data Communicating with PC Device

1. Connect the standard USB connector to the USB port of the PC device.



2. Connect the micro USB connector to the micro USB port at the bottom.



2.5 LED status



Green	The battery is fully charged
Lights Red	The battery is charging. The battery level is between low and full
Blue	Message is received.

2.6 To check the battery level and to access the battery usage menu

1 From your Home screen, tap 🕮.



2 Find and tap Settings.



3 Find and tap Battery.





3. Basic Operation

3.1 Accessing and using applications

To open the Application screen

From your Home screen, tag



To browse the Application screen

From the Application screen, flick right or left.

To create a shortcut to an application on the Home screen

1 From your Home screen, tap



- 2 Touch and hold an application icon and then the Home screen opens.
- 3 Drag the icon to the desired page on the Home screen by flicking left or rught, then release your finger.

To Remove a shortcut of an application on the Home screen

1 From your Home screen, touch and hold the icon of the desired application you want to remove

- 2 "X Remove" shows on the top of the home screen.
- 3 Drag the icon to be removed to the "X Remove".

Calling

Call handling To make a call by dialing

- 1 From your Home screen, tap
- 2 Find and tap Phone.
- 3 Enter the number of the recipient and tap Call. To delete a number, tap \mathbf{X} .

To end a call



3.2 Barcode Scanning (For Imager Version only)

1. Tap the ScanService



📓 🖬 🚯	e	,	1:08
Settings	Test	t Ve	rsion
UPC/EAN			
Code 128			
Code 39			
Code 93			
Code 11			
Interleaved 2 of 5			
Discrete 2 of 5			
Chinese 2 of 5			
Codabar			
MSI			
GS⁄1 DataBar			
Data Options			
Serial Parameters	;		
Scanner Options			
Service close after ex	it: 🗌 or	ı	
Get All Param	Raw	Packeted	

2. Aim the Bar code Scan Engine to the barcode and press one of two scan buttons.



3.3 RFID Sensing

1. Tap the NFC Reader



^NF[⊗]





4. Specification

System Features		
CPU	TI OMAP 4470 1.5Ghz Dual Core Processor	
Memory	1GB Mobile DDR RAM	
	8GB eMMC Flash	
OS	Android 4.1.1 Jelly Bean	
Languages support	English, Simp. Chinese, Traditional Chinese, Japanese,	
	Spanish, German, French	
Display		
Gorilla Glass II with 5-point capaciti	ve touch panel	
4.7" Color 450nits High Brightness	TFT 720x1280 dots IPS LCD	
Keypad		
4 x Function key	1 x Power key	
2 x Scan Key	2 x Volume key	
Indicator		
1 LED indicate charge/Message		
Vibrator		
Symbologies		
1D CCD Barcode scanner	UPC-A/E, EAN-8/13, Codabar, Code 39, Code 39 full	
	ASCI, Code 93,Code 32, Interleaved & Std. 2 of 5, EAN	
	128, Code 11, Delta, MSI/Plessey,Code 128, Toshiba, RSS	
	expended, RSS Limited, RSS14.	
Audio		
1W speaker 85 dB at 10cm , 3.5mm	n Audio Jack, Receiver, Microphone	
Regulatory Approvals		
CE, NCC, FCC, BSMI, VCCI, CCC,	RoHS compliance	
Communication		
Camera and Flash Light	5MP CMOS Sensor Camera with dual Auto focus LED	
	flash light	
External storage	Support MicroSD memory card up to 32GB	
USB	USB 2.0 OTG	
WLAN	IIEEE 802.11 b/g/n	
Bluetooth	Bluetooth 4.0	
WWAN	GSM/GPRS/EDGE 850/900/1800/1900 MHzUMTS	
	850/900/1700/1900/2100 MHz WCDMA modem, HSPA+,	
	DL: 21Mbps/ UL: 5.76Mbps	

Other Sensors	GPS
	eCompass
	Light & Proximity sensor
	G-sensor
RFID/HF (Optional)	Frequency: 13.56MHz
	Tag Support: ISO15693, ISO14443A , ISO14443B
	Support NFC
GPS	12 x 12 mm patch antenna
Power Source	
Main Battery	11.9Wh 3.7V @3220mAh Li-Polymer battery pack
Backup Battery capacity	1 hour
Enclosure	
Weight	285g (with battery)
Dimension	160mm x17.4mm x 80mm (without engine)
Environmental	
Operating temperature	14°F to 122°F (-10°C to 50°C)
Storage temperature	-4°F to 140°F (-20°C to 60°C)
Charging Temperature	32°F to 104°F (0°C to 40°C)
Relative Humidity	5% ~ 95% (non-condensing)
Drop test to Concrete	1.2 meter
Environmental Sealing	IP65
Vibration and Shock test	MIL-STD-810F, 514.4 process II
Software	
Android 4.1.1 API level 16	
Accessories	
Single Slot USB Client/on the go C	radle with Single Slot Battery Charger
Handstrap	
3220mAH standard Battery	
USB Communication Cable	

Power adaptor with universal plugs

Appendix Worldwide Support

Unitech's professional support team is available to quickly answer questions or assist with technical-related issues. Should an equipment problem occur, please contact the nearest Unitech regional service representative. For complete contact information please visit the Web sites listed below:

Unitech America

Los Angeles, Houston http://us.ute.com e-mail: info@us.ute.com http://can.ute.com info@can.ute.com **Mexico** http://latin.ute.com e-mail: info@latin.ute.com **Unitech Asia Pacific & Middle East** Taipei http://apac.ute.com info@apac.ute.com / info@india.ute.com http://mideast.ute.com info@mideast.ute.com **Unitech Japan** Tokyo http://jp.ute.com e-mail: info@jp.ute.com **Unitech Europe** Tilburg / Netherlands http://eu.ute.com e-mail: info@eu.ute.com **Unitech Greater China** Beijing, Shanghai, Guang Zhou, Xiamen http://cn.ute.com info@cn.ute.com Taipei http://tw.ute.com info@tw.ute.com **Head Office** Taipei http://www.ute.com e-mail: info@hq.ute.com