


BIXOLON®

Bluetooth Connection Manual

SPP-R310

Mobile Printer
Rev. 1.00

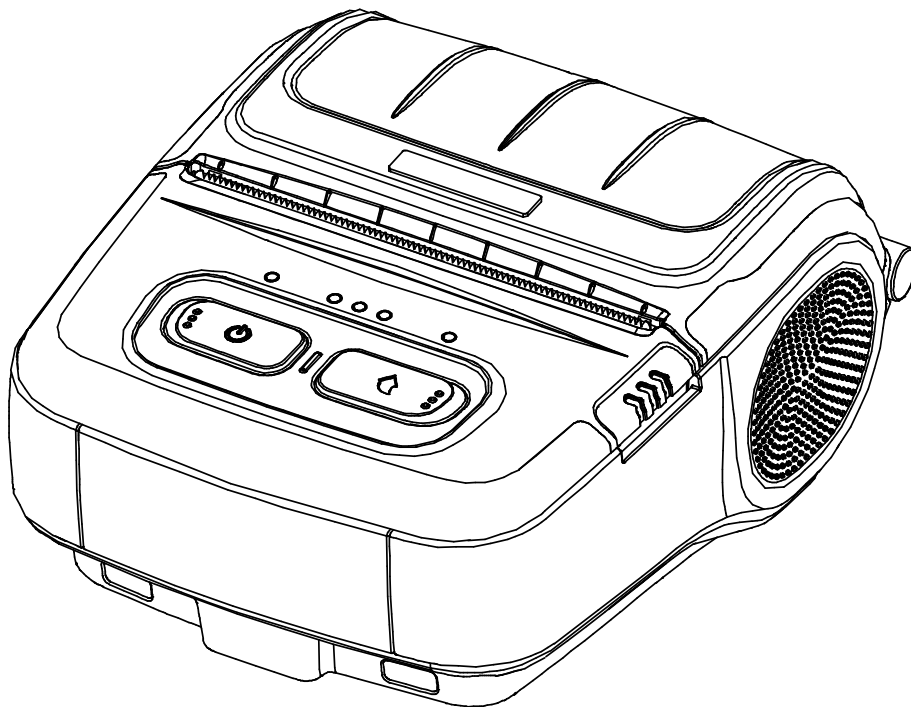

<http://www.bixolon.com>

■ Table of Contents

1. Manual Information.....3

2. Precautions3

3. iOS MFi mode change3

 3-1 Set-up by printer button3

 3-2 iOS mode check3

4. Bluetooth Connection Instructions.....4

 4-1 iOS mode enable4

 4-2 Android mode(iOS mode disable).....6

5. Troubleshooting.....8

1. Manual Information

This Bluetooth Connection Manual provides information on the connection of Bluetooth-enabled iOS devices with the printer (SPP-R310).

We at BIXOLON maintain ongoing efforts to enhance and upgrade the functions and quality of all our products. In following, product specifications and/or user manual content may be changed without prior notice.

2. Precautions

- 2-1 To connect the printer with another device via Bluetooth, the devices must be within 10m of one another. The connection is broken if the distance between devices exceeds 10m.
- 2-2 The maximum separating distance may be shortened if transmission obstacles, such as cement walls, are present.
- 2-3 If a device (such as a microwave oven, wireless LAN, etc.) that uses the same frequency is present, transmission may be interrupted. Separate the printer and Bluetooth-enabled device from such interrupting devices by a distance of at least 5m.

3. iOS MFi mode change

You can switch over to MFi mode which allows you to have Bluetooth connection with iOS devices. (Note: Make sure that MFi mode must be on.)

3-1 Set-up by printer button

- Turn on the printer power.
- Push the power button and feed button for 2 seconds while paper cover is opened.
- After beep sound, close the cover.
- Reboot the printer after checking below message.
iOS mode enable!!
Please Reboot Printer!!
- Repeat above procedure to make MFi mode disable.


3-2 iOS mode check

- Implement Self Test
- If firmware version is Vxx.xx STOBa, iOS mode will be disable.
- If firmware version is Vxx.xx STOBi, iOS mode will be enable.


4. Bluetooth Connection Instructions

4-1 iOS mode enable


1) Select the  icon.

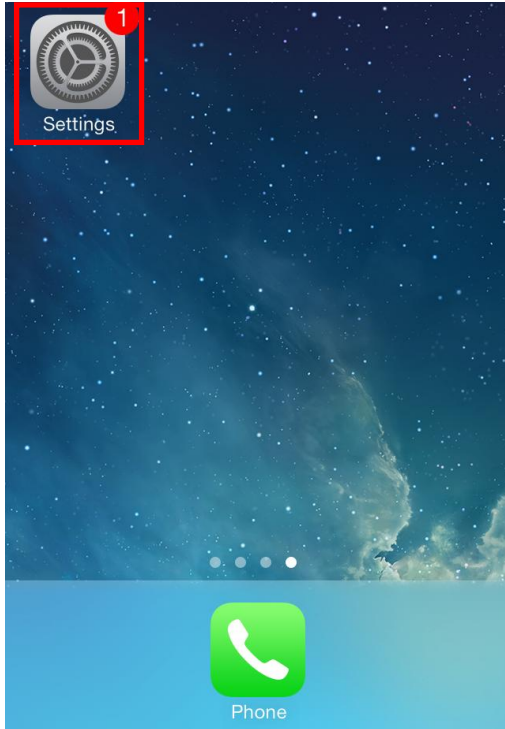


2) Select "Bluetooth"..

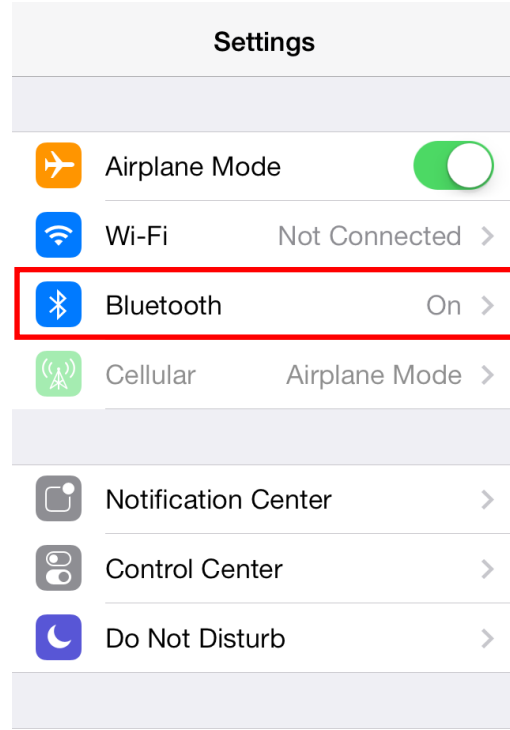


3) Select the printer to connect.

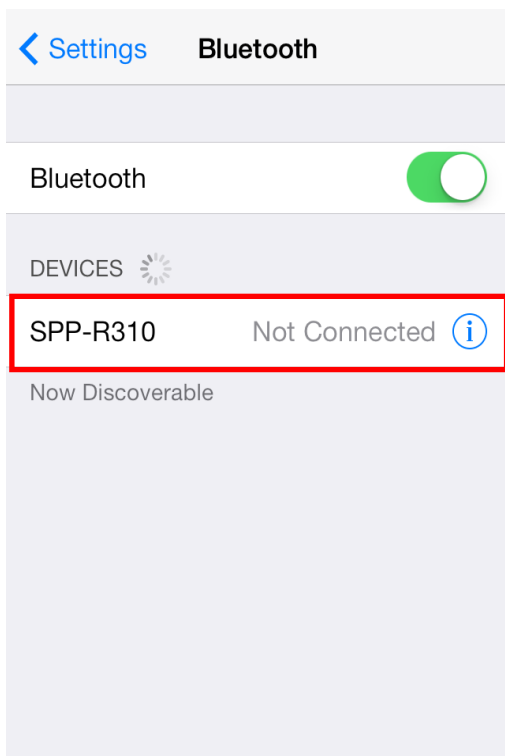


4) Enter PIN (default : 0000).

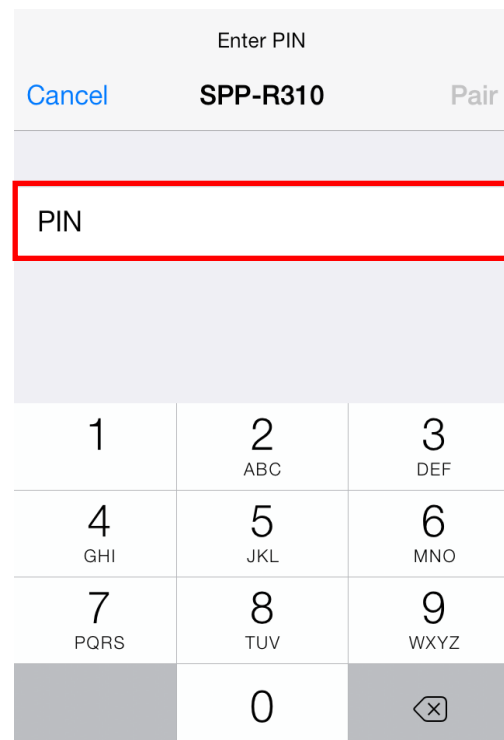

5) Select "Pair"

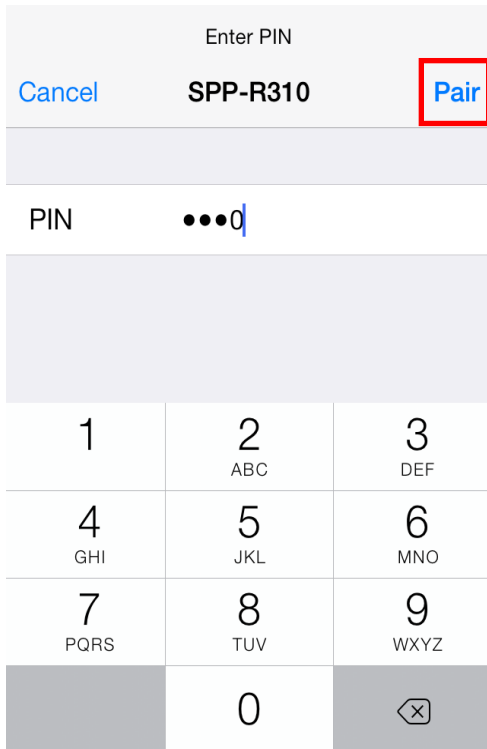

6) Bluetooth communication is available.

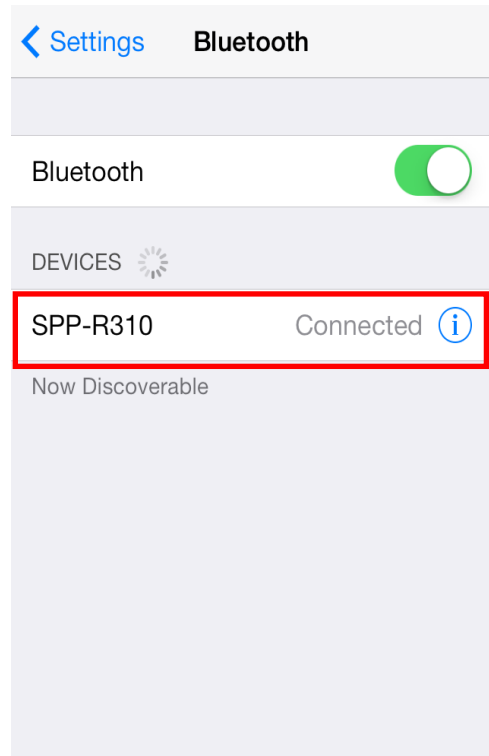


4-2 Android mode(iOS mode disable).


1) Select the  icon.




2) Select "Bluetooth".

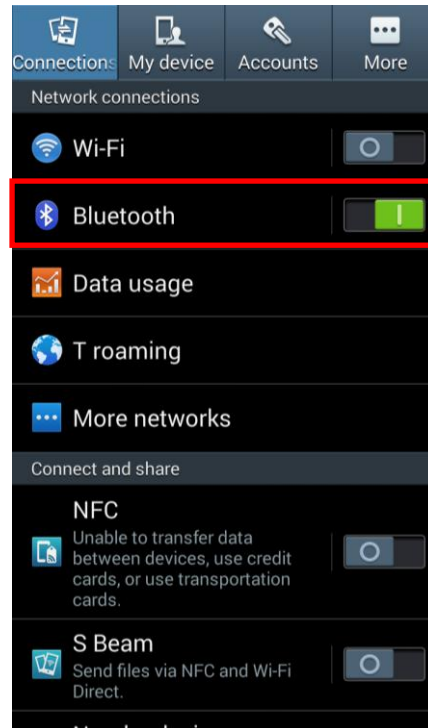


3) Select the printer to connect.

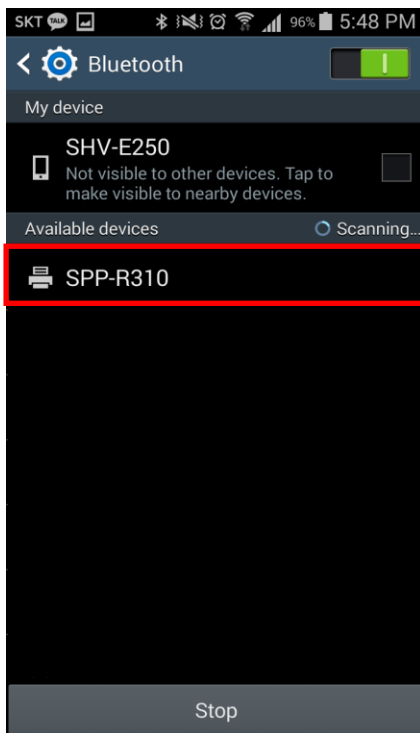


4) Enter PIN (default : 0000).

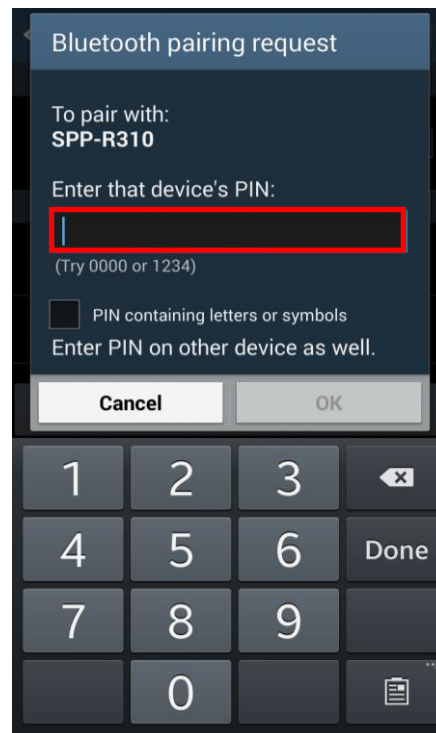

5) Select "OK".

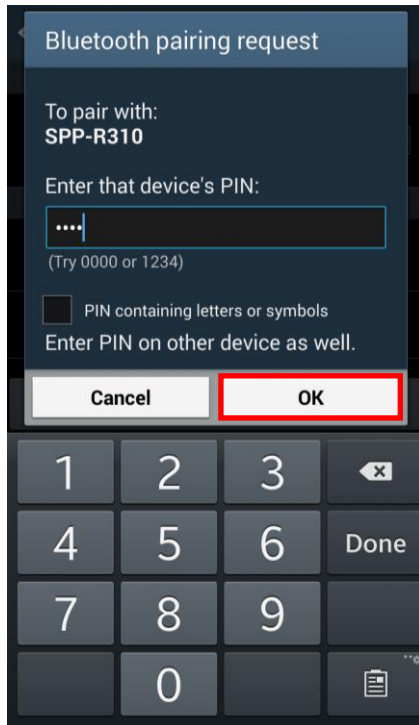


6) Bluetooth communication is available.

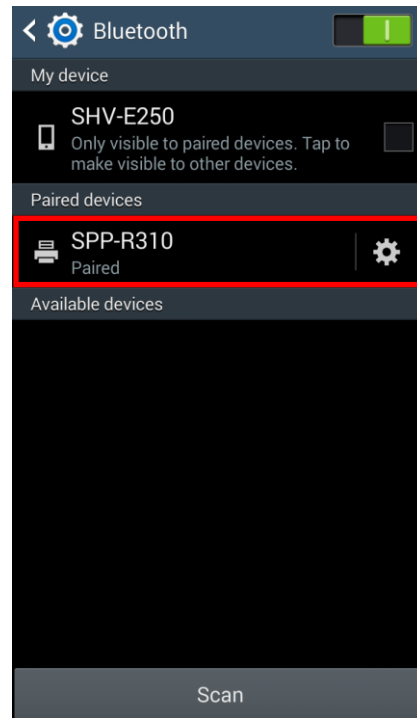


4-2-1 NFC Auto pairing

Referring to 4-2 Android mode, pairing process will be simplified by means of using NFC Auto pairing function. (Only, the device should support NFC Read/Write function)

1) Tap your host device to NFC tag on a printer.

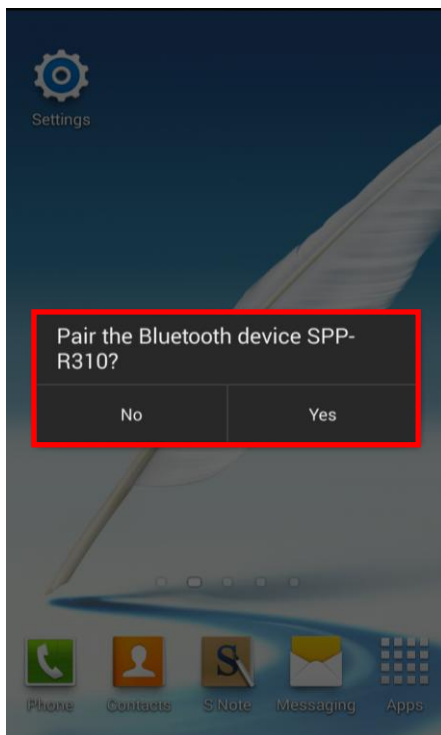

2) Enter PIN (default : 0000).
(Following process is the same as 5),6) in 4-2)

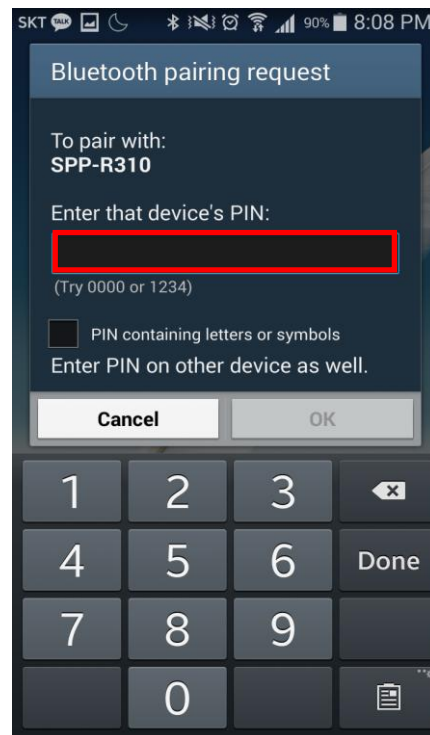

5. Troubleshooting

5-1 Please follow the guide below if Bluetooth is not searched on iOS device.

- 1) Perform self test to check the printer is set as iOS mode
- 2) Check whether printer is connected to other iOS device. Printer is not able to be found on your iOS device if it is connected to other iOS device. If STATUS LED blinks when you press Feed button, it means that printer is connected to other iOS device.
You need to disconnect the connection to other iOS device, or turn on the printer again while the paper cover is opened.

** Printer is automatically connected to last iOS device which was connected in iOS mode. But it does not make a connection to any device, if user turns it on while the paper cover of it is opened.*

5-2 Refer to this, if you see the pop-up message as below

- 1) “Failed to connect to SPP-R310”



- 2) The “Failed to connect” message might appear on a screen, since NFC Auto pairing merely supports Bluetooth pairing and does not allow device to device communication. However, it operates properly.